

# Service Manual

## MIRAGE

1993 - 1996  
Volume 2

### Electrical

#### FOREWORD

This Service Manual has been prepared with the latest service information available at the time of publication. It is subdivided into various group categories and each section contains diagnosis, disassembly, repair, and installation procedures along with complete specifications and tightening references. Use of this manual will aid in properly performing any servicing necessary to maintain or restore the high levels of performance and reliability designed into these outstanding vehicles.



Mitsubishi Motors Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.

General .....	
Fusible Link, Fuse and IOD or Storage Connector Location .....	
Inspection Terminal Location .....	
Grounding Cable Location .....	
Grounding Location .....	
Relay Location .....	
Sensor Location .....	
Control Unit Location .....	
Solenoid, Solenoid Valve Location .....	
Diode Location .....	
Junction Block .....	
Jumper Connector .....	
Centralized Junction .....	
Harness Connector Inspection .....	
How to Diagnose .....	
Configuration Diagrams .....	
Circuit Diagrams .....	
Engine Electrical .....	16
Chassis Electrical .....	54
Alphabetical Index .....	

#### NOTE:

- For information concerning all components other than the electrical system and on-vehicle service procedures for engines and transmissions, refer to Volume 1 "Chassis & Body" of this paired Service Manual.
- For overhaul procedures of engines or transmissions, refer to the separately issued Engine Service Manual or Manual/Automatic Transmission Service Manual.

## A

ABS, Checking Operation	35-51-I
ACCELERATOR	
CABLE	13F-8-I
Inspection and Adjustment	13F-4-I
PEDAL	13F-8-I
AERO PARTS	51-12-I
AIR BAG	
MODULES	52B-54-I
Deployed, Disposal	52B-73-I
Disposal Procedures	52B-70-I
Undeployed, Disposal	52B-70-I
AIR CLEANER	
<1.5L Engine>	15-3-I
<1.8L Engine>	15-4-I
ELEMENT	
Inspection and Replacement	15-2-I
Maintenance	00-43-I
AIR CONDITIONING	
COMPRESSOR CLUTCH RELAY	
On-vehicle Inspection <1.5L Engine>	13A-97-I, 13A-155-I
<1.8L Engine>	13A-239-I, 13A-268-I
COMPRESSOR DRIVE BELT, Tension, Inspection and Adjustment <1.5L Engine>	11A-9-I
REFRIGERANT MEDIUM PRESSURE SWITCH, On-vehicle Inspection <1.8L Engine>	13A-240-I, 13A-269-I
SWITCH	17-15-I, 55-29-I
On-vehicle Inspection <1.5L Engine>	13A-97-I, 13A-156-I
<1.8L Engine>	13A-239-I, 13A-268-I
AIR THERMO SENSOR, Check	55-13-I
AUTO-CRUISE CONTROL	
CONTROL SYSTEM	13G-28-I
CONTROL SWITCH, Inspection	13G-23-I
MAIN SWITCH, Inspection	13G-22-I
AUTOMATIC TRANSAXLE	
Key Interlock Mechanism	23-102-I
Shift Lock Mechanism	23-102-I
Maintenance	00-48-I
AXLE HUB	
Front	26-6-I
Rear	27-4-I

## B

BALL JOINT SEALS, Maintenance	00-51-I
BALL JOINT, Tie-rod End, Breakaway Torque Check	37A-9-I
BAROMETRIC PRESSURE SENSOR, On-vehicle Inspection <1.8L Engine>	13A-234-I, 13A-264-I
BASIC IDLE SPEED	
Adjustment <1.5L Engine>	13A-48-I
<1.8L Engine>	13A-217-I
BATTERY	54-3-II
Charging	54-3-II
Inspection	54-3-II
Test	54-4-II
BLOWER	55-32-I
MOTOR	55-31-I
MOTOR RESISTOR	55-31-I
BOOSTER	35-60-I
Operating Test	35-42-I
DISC	
Front, Run-out Check	35-46-I
Front, Run-out Correction	35-46-I
Front, Thickness Check	35-46-I
Rear, Run-out Check <ABS>	35-49-I
Rear, Run-out Correction <ABS>	35-49-I
Rear, Thickness Check <ABS>	35-49-I
DRUM INSIDE DIAMETER, Check	35-50-I

DRUM, Connection Check	35-50-I
FLUID LEVEL SENSOR, Check	35-43-I
HOSES, Maintenance	00-51-I
LINING	
Connection Check	35-50-I
Thickness Check	35-50-I
PAD	
Disc, Front, Check and Replacement	35-44-I
Disc, Rear, Check and Replacement <ABS>	35-47-I
PEDAL, Inspection and Adjustment	35-41-I
PEDAL	
<A/T>	35-59-I
<M/T>	35-56-I
BRAKE	
Disc, Front	35-65-I
Disc, Rear <ABS>	35-74-I
Drum, Inside Diameter, Check	35-50-I
Drum, Rear, Shoe	35-69-I
Drum, Rear, Wheel Cylinder	35-72-I
BULB REPLACEMENT	54-25-II
BUMPER	
Front	51-3-I
Rear	51-4-I
BUZZER	54-50-II

## C

CAMSHAFT	
<1.5L Engine>	11A-19-I
<1.8L Engine>	11B-18-I
OIL SEAL	
<1.5L Engine>	11A-19-I
<1.8L Engine>	11B-18-I
POSITION SENSOR	
On-vehicle Inspection <1.5L Engine>	13A-79-I, 13A-145-I
<1.8L Engine>	13A-234-I, 13A-266-I
CATALYTIC CONVERTER	15-2-I, 17-22-I
CENTERMEMBER	32-7-I
CHARGING SYSTEM	16-2-II
Generator Output Line Voltage Drop Test	16-12-II
Generator Relay Continuity Check	16-18-II
Output Current Test	16-13-II
Regulated Voltage Test	16-15-II
Wave-form Inspection Using an Analyzer	16-16-II
CHECK VALVE, Operation Check	35-42-I
CIGARETTE LIGHTER	54-58-II
CIRCUIT BREAKER (Incorporated in The Power Window Motor), Inspection	42-5-I
CLOCK SPRING	52B-64-I
CLOCK	54-60-II
CLOSED THROTTLE POSITION SWITCH	
Adjustment <1.5L Engine>	13A-46-I
<1.8L Engine>	13A-217-I
On-vehicle Inspection <1.5L Engine>	13A-74-I, 13A-143-I
<1.8L Engine>	13A-233-I, 13A-266-I
CLUTCH	
CONTROL	
<CABLE TYPE>	21-11-I
<HYDRAULIC TYPE>	21-12-I
MASTER CYLINDER	21-14-I
PEDAL	
Inspection and Adjustment	21-6-I
<CABLE TYPE>	21-8-I
<HYDRAULIC TYPE>	21-9-I
COIL	
Ignition, On-vehicle Inspection	
<1.5L Engine>	13A-115-I, 13A-167-I
<1.8L Engine>	13A-250-I, 13A-281-I
COLUMN SWITCH	54-46-I

COMBINATION LIGHT, Rear .....	54-39-II
COMPRESSION PRESSURE	
Inspection <1.5L Engine> .....	11A-12-I
<1.8L Engine> .....	11B-13-I
COMPRESSOR CLUTCH RELAY	
Air Conditioning, On-vehicle Inspection	
<1.5L Engine> .....	13A-97-I, 13A-155-I
<1.8L Engine> .....	13A-239-I, 13A-268-I
COMPRESSOR .....	55-37-I
DRIVE BELT, Adjustment .....	55-13-I
NOISE .....	55-23-I
CONDENSER .....	55-49-I
FAN MOTOR .....	55-49-I
CONSOLE, Floor .....	52A-27-I
CONTROL CABLE, Inspection and Adjustment .....	13G-21-I
CONTROL LINK .....	34-6-I
CRANKCASE VENTILATION SYSTEM, Inspection .....	17-11-I
CRANKSHAFT	
OIL SEAL	
<1.5L Engine> .....	11A-23-I
<1.8L Engine> .....	11B-22-I
POSITION SENSOR	
On-vehicle Inspection <1.5L Engine> .....	13A-85-I, 13A-148-I
<1.8L Engine> .....	13A-236-I, 13A-267-I
PULLEY	
<1.5L Engine> .....	11A-29-I
<1.8L Engine> .....	11B-31-I
CURB IDLE SPEED	
Inspection <1.5L Engine> .....	11A-11-I
<1.8L Engine> .....	11B-11-I
CYLINDER HEAD GASKET	
<1.5L Engine> .....	11A-25-I
<1.8L Engine> .....	11B-26-I

## D

DEFOGGER, Rear Window .....	54-88-II
DISC BRAKE	
Front .....	35-65-I
Rear <ABS> .....	35-74-I
PADS, Maintenance .....	00-51-I
DISTRIBUTOR .....	16-63-II
CAP, Maintenance .....	00-45-I
ROTOR, Maintenance .....	00-45-I
DOOR .....	42-25-I
Fit, Adjustment .....	42-5-I
GLASS .....	42-29-I
Adjustment .....	42-5-I
HANDLE .....	42-32-I
LATCH .....	42-32-I
MIRROR .....	51-16-I
OPENING WEATHERSTRIP .....	42-37-I
REGULATOR .....	42-29-I
TRIM .....	42-27-I
WATERPROOF FILM .....	42-27-I
DRIVE BELT	
(For Water Pump and Generator), Maintenance .....	00-45-I
Compressor, Adjustment .....	55-13-I
Tension Check <Power Steering> .....	37A-10-I
DRIVE SHAFT .....	26-12-I
BOOTS, Maintenance .....	00-52-I
DRUM BRAKE	
Inside Diameter, Check .....	35-50-I
Rear, Shoe .....	35-69-I
Rear, Wheel Cylinder .....	35-72-I
DUAL PRESSURE SWITCH, Check <1.5L Engine> .....	55-12-I

## E

EGR	
PORT VACUUM, Inspection .....	17-21-I
SOLENOID	
Inspection .....	17-21-I
On-vehicle Inspection <1.5L Engine> .....	13A-121-I, 13A-171-I
<1.8L Engine> .....	13A-252-I, 13A-283-I
SYSTEM, Inspection .....	17-21-I
TEMPERATURE SENSOR	
Inspection .....	17-22-I
On-vehicle Inspection <1.5L Engine> .....	13A-99-I
<1.8L Engine> .....	13A-242-I
VALVE, Inspection .....	17-20-I
ELC-4A/T CONTROL	
Component Layout <F4A22> .....	23-75-I
Component, Inspection <F4A22> .....	23-77-I
ELECTRICAL LOAD SWITCH, On-vehicle Inspection	
<1.8L Engine> .....	13A-246-I
ELECTRONIC CONTROL UNIT <ABS> .....	35-85-I
ENGINE	
<1.5L Engine> .....	11A-16-I
<1.8L Engine> .....	11B-14-I
CONTROL MODULE POWER GROUND	
On-vehicle Inspection <1.5L Engine> .....	13A-59-I, 13A-135-I
<1.8L Engine> .....	13A-221-I, 13A-260-I
CONTROL MODULE TERMINAL VOLTAGE	
Check, On-vehicle Inspection	
<1.5L Engine> .....	13A-126-I, 13A-172-I
Check, On-vehicle Inspection	
<1.8L Engine> .....	13A-263-I, 13A-2285-I
MOUNTING .....	32-4-I
OIL FILTER, Maintenance .....	00-47-I
OIL, Maintenance .....	00-46-I
ROLL STOPPER .....	32-7-I
ENGINE COOLANT	
Concentration Test .....	14-5-I
Leak Check .....	14-5-I
Maintenance .....	00-49-I
Replacement .....	14-5-I
TEMPERATURE GAUGE UNIT .....	14-17-I
Inspection .....	54-15-II
TEMPERATURE GAUGE, Simple Inspection .....	54-15-II
TEMPERATURE SENSOR	
On-vehicle Inspection <1.5L Engine> .....	13A-68-I, 13A-141-I
<1.8L Engine> .....	13A-231-I, 13A-265-I
TEMPERATURE SENSOR .....	14-17-I, 17-15-I
TEMPERATURE SWITCH .....	14-17-I
EVAPORATIVE EMISSION	
CANISTER .....	17-24-I
CONTROL SYSTEM .....	17-12-I
Maintenance .....	00-44-I
PURGE SOLENOID	
Inspection .....	17-15-I
On-vehicle Inspection <1.5L Engine> .....	13A-119-I, 13A-170-I
<1.8L Engine> .....	13A-251-I, 13A-282-I
EVAPORATOR .....	55-34-I
EXHAUST	
GAS RECIRCULATION (EGR) SYSTEM .....	17-16-I
MANIFOLD .....	15-10-I
PIPE .....	15-13-I
SYSTEM, Maintenance .....	00-56-I

## F

FAN MOTOR, Relay, On-vehicle Inspection	
<1.8L Engine> .....	13A-240-I, 13A-269-I
FENDER .....	42-10-I

FIXED SAS			
Adjustment <1.5L Engine>	13A-48-I		
<1.8L Engine>	13A-217-I		
FLOOR CONSOLE	52A-27-I		
FUEL			
FILLER DOOR	42-11-I		
FILTER	13F-7-I		
GAUGE UNIT, Inspection	54-14-II		
GAUGE, Simple Inspection	54-13-II		
HOSES, Maintenance	00-44-I		
PRESSURE TEST			
On-vehicle Inspection <1.5L Engine>	13A-123-I, 13A-171-I		
<1.8L Engine>	13A-252-I, 13A-284-I		
PUMP			
Connector Disconnection (How to Reduce The Fuel Pressure)			
<1.5L Engine>	13A-50-I		
<1.8L Engine>	13A-217-I		
Operation, Check <1.5L Engine>	13A-51-I		
<1.8L Engine>	13A-217-I		
On-vehicle Inspection <1.5L Engine>	13A-60-I, 13A-136-I		
<1.8L Engine>	13A-221-I, 13A-260-I		
SENSOR	54-14-II		
SYSTEM, Maintenance	00-44-I		
TANK	13F-5-I		
<b>G</b>			
GARNISHES	51-6-I		
GASKET			
Cylinder Head <1.5L Engine>	11A-25-I		
<1.8L Engine>	11B-26-I		
GAUGE UNIT			
Engine Coolant Temperature, Inspection	54-15-II		
Engine Coolant Temperature	14-17-I		
Fuel, Inspection	54-14-II		
GAUGES	54-7-II		
GEAR BOX			
Manual Steering	37A-20-I		
Power Steering	37A-26-I		
GENERATOR	16-19-II		
On-vehicle inspection <1.5L Engine>	13A-156-I		
<1.8L Engine>	13A-271-I		
RELAY CONTINUITY, Check	16-18-II		
GENERATOR DRIVE BELT			
Tension, Inspection and Adjustment <1.5L Engine>	11A-8-I		
<1.8L Engine>	11B-6-I		
GLASS			
Door, Adjustment	42-5-I		
Door	42-25-I		
Quarter Window	42-20-I		
Rear Window	42-23-I		
Window	42-12-I		
GRILLE, Radiator	51-5-I		
<b>H</b>			
HANDLE, Door	42-32-I		
HAZARD LIGHT	54-26-II		
HEADLIGHT	54-19-II		
AIMING	54-22-II		
HEADLINING	52A-38-I		
HEATED OXYGEN SENSOR			
On-vehicle Inspection <1.5L Engine>	13A-104-I, 13A-158-I		
<1.8L Engine>	13A-243-I, 13A-274-I		
HEATER			
CONTROL	55-26-I		
CORE	55-30-I		
UNIT	55-30-I		
HIGH-MOUNTED STOP LIGHT	54-43-II		
HOOD	42-6-I		
HORN	54-52-II		
HYDRAULIC CIRCUIT			
<F3A21>	23-61-I		
<F4A22>	23-90-I		
HYDRAULIC PRESSURE TEST			
<F3A21>	23-59-I		
<F4A22>	23-82-I		
HYDRAULIC UNIT <ABS>	35-80-I		
<b>I</b>			
IAC VALVE POSITION SENSOR			
On-vehicle Inspection <1.5L Engine>	13A-76-I, 13A-144-I		
<1.8L Engine>	13A-233-I, 13A-266-I		
IDLE AIR CONTROL MOTOR <DC Motor>			
On-vehicle Inspection <1.5L Engine>	13A-113-I, 13A-166-I		
<1.8L Engine>	13A-249-I, 13A-280-I		
IDLE MIXTURE			
Inspection <1.5L Engine>	11A-11-I		
<1.8L Engine>	11B-12-I		
IDLE SPEED			
Basic, Adjustment <1.5L Engine>	13A-48-I		
<1.8L Engine>	13A-217-I		
IDLE-UP OPERATION, Check	55-25-I		
IGNITION			
CABLES, Maintenance	00-45-I		
COIL			
On-vehicle Inspection <1.5L Engine>	13A-115-I, 13A-167-I		
<1.8L Engine>	13A-250-I, 13A-281-I		
POWER TRANSISTOR			
On-vehicle Inspection <1.5L Engine>	13A-115-I, 13A-167-I		
<1.8L Engine>	13A-250-I, 13A-281-I		
SWITCH	54-5-II		
SWITCH-ST <A/T>			
On-vehicle Inspection <1.5L Engine>	13A-87-I, 13A-148-I		
<1.8L Engine>	13A-227-I, 13A-256-I		
SWITCH-ST <M/T>			
On-vehicle Inspection <1.5L Engine>	13A-90-I, 13A-151-I		
<1.8L Engine>	13A-239-I, 13A-268-I		
SYSTEM, Wave Pattern Inspection Using an Analyzer	16-53-II		
SYSTEM	16-41-II		
TIMING			
Inspection and Adjustment <1.5L Engine>	11A-10-I		
<1.8L Engine>	11B-10-I		
INJECTOR			
<1.5L Engine>	13A-175-I		
<1.8L Engine>	13A-289-I		
On-vehicle Inspection <1.5L Engine>	13A-108-I, 13A-164-I		
<1.8L Engine>	13A-248-I, 13A-278-I		
INSTRUMENT PANEL	52A-20-I		
INTAKE AIR TEMPERATURE SENSOR	17-15-I		
On-vehicle Inspection <1.5L Engine>	13A-63-I, 13A-137-I		
<1.8L Engine>	13A-226-I, 13A-263-I		
INTAKE MANIFOLD			
<1.5L Engine>	15-5-I		
<1.8L Engine>	15-7-I		
Vacuum Inspection	15-2-I		
<b>K</b>			
KEY INTERLOCK MECHANISM	23-107-I		
KEY INTERLOCK SYSTEM			
Inspection <F3A21>	23-71-I		
<F4A22>	23-102-I		
KICKDOWN SERVO, Adjustment <F4A22>	23-99-I		

## L

LATCH, Door	42-32-I
LID, Trunk	42-7-I
LIGHT	
Rear Combination	54-39-II
Stop, High-Mounted	54-43-II
LINE PRESSURE	
Adjustment <F3A21>	23-70-I
<F4A22>	23-100-I
LINK	
Control	34-6-I
Upper	34-6-I
LOWER ARM	
Front	33A-11-I
Rear	34-6-I

## M

MAIN MUFFLER	15-13-I
MANIFOLD ABSOLUTE PRESSURE SENSOR,	
On-vehicle Inspection <1.5L Engine>	13A-66-I, 13A-138-I
MANUAL STEERING GEAR BOX	37A-20-I
MANUAL TRANSAXLE, Maintenance	00-48-I
MASTER CYLINDER	
Brakes	35-60-I
Clutch	21-14-I
METERS	54-7-II
MIRROR, Door	51-16-I
MOTOR <DC Motor>	
Idle Air Control, On-vehicle Inspection	
<1.5L Engine>	13A-113-I, 13A-166-I
<1.8L Engine>	13A-249-I, 13A-280-I
MOLDINGS	51-8-I
MOUNTING	
Engine	32-4-I
Transaxle	32-6-I
MUFFLER, Main	15-13-I

## N

NO.2 CROSSMEMBER	32-9-I
NOISE, Compressor	55-23-I

## O

OIL	
COOLER HOSES, Transaxle	23-109-I
FILTER, Engine, Maintenance	00-47-I
LEVEL, Transaxle, Inspection	22-6-I
PAN	
<1.5L Engine>	11A-21-I
<1.8L Engine>	11B-20-I
PRESSURE SWITCH, Power Steering, Check	37A-14-I
PUMP	
Power Steering, Pressure Test	37A-13-I
Power Steering	37A-36-I
SEAL	
Camshaft <1.5L Engine>	11A-19-I
<1.8L Engine>	11B-18-I
Crankshaft <1.5L Engine>	11A-23-I
<1.8L Engine>	11B-22-I
OXYGEN SENSOR <Federal>	
On-vehicle Inspection <1.5L Engine>	13A-101-I
<1.8L Engine>	13A-242-I

## P

PARK/NEUTRAL POSITION SWITCH <A/T>	
On-vehicle Inspection <1.5L Engine>	13A-91-I, 13A-152-I
<1.8L Engine>	13A-239-I, 13A-268-I
PARKING BRAKE	
CABLE	36-7-I
LEVER	36-6-I
Stroke Inspection and Adjustment	36-4-I
SWITCH, Check	36-5-I
PARKING LIGHT	54-28-II
PERFORMANCE TEST	55-21-I
POSITIVE CRANKCASE VENTILATION	
VALVE, Inspection	17-11-I
SYSTEM	17-10-I
POWER RELAY, Check	55-24-I
POWER STEERING	
FLUID	
Level Check	37A-10-I
Replacement	37A-11-I
GEAR BOX	37A-26-I
HOSES	37A-45-I
OIL PRESSURE SWITCH, Check	37A-14-I
OIL PUMP	37A-36-I
Pressure Test	37A-13-I
OIL PUMP DRIVE BELT	
Tension, Inspection and Adjustment <1.5L Engine>	11A-8-I
<1.8L Engine>	11B-8-I
PRESSURE SWITCH	
On-vehicle Inspection <1.5L Engine>	13A-95-I, 13A-154-I
<1.8L Engine>	13A-239-I, 13A-268-I
PROPORTIONING VALVE, Function Test	35-43-I
PURGE CONTROL SYSTEM, Inspection	17-13-I
PURGE PORT VACUUM, Inspection	17-14-I

## Q

QUARTER WINDOW GLASS	42-20-I
----------------------	---------

## R

RADIATOR	14-6-I
CAP, Pressure Test	14-5-I
GRILLE	51-5-I
RADIO	54-62-II
REAR COMBINATION LIGHT	54-39-II
REAR WHEEL CYLINDERS, Maintenance	00-51-I
REAR WINDOW DEFOGGER	54-88-II
REDUCING PRESSURE, Adjustment <F4A22>	23-102-I
REFRIGERANT	
Leak Repair Procedure	55-23-I
LINE	55-52-I
TEMPERATURE SWITCH	55-47-I
REGULATOR, Door	42-29-I
RELAY	
Air Conditioning Power, Check	55-24-I
Fan Motor, On-vehicle Inspection	
<1.8L Engine>	13A-240-I, 13A-269-I
RESISTOR <1.8L Engine>	55-51-I
RHEOSTAT	54-48-II
ROLL STOPPER, Engine	32-7-I
RUNCHANNEL, Window Glass	42-37-I

## S

SEAT	
Front	52A-39-I
Rear	52A-41-I

SEAT BELT			
Front	52A-43-I		
Rear	52A-50-I		
SELECTOR LEVER			
Operation Check <F3A21>	23-71-I		
<F4A22>	23-102-I		
SENSOR			
Air Thermo, Check	55-13-I		
Barometric Pressure	Refer to B		
Brake Fluid Level, Check	35-43-I		
Camshaft Position	Refer to C		
Crankshaft Position	Refer to C		
EGR Temperature	Refer to E		
Engine Coolant Temperature	Refer to E		
Fuel	54-14-II		
Heated Oxygen	Refer to H		
Intake Air Temperature	Refer to I		
Manifold Absolute Pressure	Refer to M		
Oxygen	Refer to O		
Throttle Position	Refer to T		
Vehicle Speed	Refer to V		
Volume Air Flow	Refer to V		
Wheel Speed <ABS>	35-82-I		
SHIFT LEVER	22-10-I		
SHIFT LOCK MECHANISM	23-107-I		
SHIFT-LOCK SYSTEM			
Inspection <F3A21>	23-72-I		
<F4A22>	23-102-I		
SIDE-MARKER LIGHT	54-28-II		
SOLENOID			
EGR	Refer to E		
Evaporative Emission Purge	Refer to E		
SPARK PLUG			
Test	16-52-II		
Maintenance	00-45-I		
CABLE, Test	16-52-II		
SPEEDOMETER			
Inspection	54-12-II		
CABLE			
Replacement <F3A21>	23-73-I		
<F4A22>	23-102-I		
<M/T>	22-7-I		
SRS			
Air Bag Control Unit (SRS-ECU)	52B-60-I		
Circuit Diagram	52B-14-I		
Component Service	52B-60-I		
Component Location	52B-20-I		
Configuration Diagrams	52B-9-I		
Connector Construction	52B-11-I		
Construction Diagram	52B-3-I		
Introduction	52B-2-I		
Maintenance	00-52-I, 52B-57-I		
Post-collision Diagnosis	52B-57-I		
Schematic	52B-7-I		
Service Precautions	52B-21-I		
Warning/Caution Labels	52B-4-I		
STABILIZER BAR	33A-14-I		
STARTER MOTOR	16-33-II		
STARTER RELAY CONTINUITY, Check	16-32-II		
STARTING SYSTEM	16-28-II		
STATIONARY STEERING EFFORT, Check	37A-9-I		
STEERING			
Angle Check	37A-8-I		
GEAR BOX			
Manual	37A-20-I		
Power	37A-26-I		
LINKAGE SEALS, Maintenance	00-51-I		
SHAFT	37A-15-I		
WHEEL			
Return to Center, Check	37A-10-I		
Free Play Check	37A-8-I		
STOP LIGHT, High-Mounted	54-43-II		
STRUT			
Front	33A-6-I		
Rear	34-11-I		
SWITCH			
Air Conditioning Refrigerant Medium Pressure	Refer to A		
Air Conditioning	Refer to A		
Auto-cruise Control Main, Inspection	13G-22-I		
Auto-cruise Control, Inspection	13G-23-I		
Closed Throttle Position	Refer to C		
Column	54-46-II		
Dual Pressure, Check <1.5L Engine>	55-12-I		
Electrical Load	Refer to E		
Engine Coolant Temperature	14-17-I		
Ignition	54-5-II		
PARK/NEUTRAL Position <A/T>	Refer to P		
Parking Brake, Check	36-5-I		
Power Steering	Refer to P		
Refrigerant Temperature	55-47-I		
Triple Pressure, Check <1.8L Engine>	55-12-I		
Ignition-ST	Refer to I		
<b>T</b>			
TACHOMETER, Inspection	54-13-II		
TANK, Fuel	13F-5-I		
TAPE PLAYER	54-62-II		
TENSION PULLEY	55-37-I		
TERMINAL VOLTAGE			
Engine Control Module, Check, On-vehicle			
Inspection <1.5L Engine>	13A-126-I, 13A-172-I		
<1.8L Engine>	13A-253-I, 13A-285-I		
THERMOSTAT	14-10-I		
THROTTLE BODY			
<1.5L Engine>	13A-177-I		
<1.8L Engine>	13A-290-I		
THROTTLE BODY (THROTTLE VALVE AREA)			
Cleaning <1.5L Engine>	13A-46-I		
<1.8L Engine>	13A-217-I		
THROTTLE POSITION SENSOR			
Adjustment <1.5L Engine>	13A-46-I		
<1.8L Engine>	13A-217-I		
On-vehicle Inspection <1.5L Engine>	13A-71-I, 13A-142-I		
<1.8L Engine>	13A-233-I, 13A-266-I		
TIE-ROD END BALL JOINT, Breakaway Torque Check	37A-9-I		
TIMING BELT TENSION			
Adjustment <1.5L Engine>	11A-14-I		
<1.8L Engine>	11B-13-I		
TIMING BELT			
Maintenance	00-45-I		
<1.5L Engine>	11A-30-I		
<1.8L Engine>	11B-32-I		
TIRE	31-4-I		
INFLATION PRESSURE			
Check	31-4-I		
Wear Check	31-4-I		
TORQUE CONVERTER STALL TEST			
<F3A21>	23-58-I		
<F4A22>	23-81-I		
TRAILING ARM	34-8-I		
TRANSAXLE			
Automatic, Maintenance	00-48-I		
Manual, Maintenance	00-48-I		
<A/T>	23-110-I		
<M/T>	22-11-I		

CONTROL	
<A/T> .....	23-103-I
<M/T> .....	22-8-I
MOUNTING .....	32-6-I
OIL COOLER HOSES .....	23-109-I
OIL LEVEL, Inspection .....	22-6-I
OIL, Replacement .....	22-6-I
TRANSISTOR	
Ignition Power, On-vehicle Inspection	
<1.5L Engine> .....	13A-115-I, 13A-167-I
<1.8L Engine> .....	13A-250-I, 13A-281-I
TRIMS .....	52A-29-I
Door .....	42-25-I
TRIPLE PRESSURE SWITCH, Check <1.8L Engine> .....	55-12-I
TRUNK LID .....	42-7-I

## U

UPPER LINK .....	34-6-I
------------------	--------

## V

VACUUM CIRCUIT DIAGRAM .....	17-6-I
VACUUM CONTROL VALVE .....	17-20-I
VACUUM HOSES, Routing .....	17-3-I
VALVE CLEARANCE, Maintenance .....	00-43-I
VEHICLE SPEED SENSOR	
On-vehicle Inspection <1.5L Engine> .....	13A-93-I, 13A-153-I
<1.8L Engine> .....	13A-239-I, 13A-268-I
VENTILATION SYSTEM	
Crankcase, Inspection .....	17-11-I
Positive Crankcase .....	17-10-I
VENTILATORS	
(AIR INLET AND AIR OUTLET) .....	55-55-I
(INSTRUMENT PANEL AND FLOOR) .....	55-54-I
VOLUME AIR FLOW SENSOR .....	17-15-I
On-vehicle Inspection <1.8L Engine> .....	13A-222-I, 13A-268-I

## W

WASHER, Windshield .....	51-13-I
WATER HOSE .....	14-15-I
WATER PIPE .....	14-15-I
WATER PUMP	
<1.5L Engine> .....	14-12-I
<1.8L Engine> .....	14-14-I
WATERPROOF FILM, Door .....	42-27-I
WEATHERSTRIP, Door Opening .....	42-37-I
WHEEL .....	31-4-I
Run-out Check .....	31-4-I
Steering .....	37A-15-I
ALIGNMENT	
Front, Inspection and Adjustment .....	33A-5-I
Rear, Inspection and Adjustment .....	34-5-I
BEARING, End Play Check .....	27-3-I
SPEED SENSOR <ABS> .....	35-82-I
WINDOW GLASS .....	42-12-I
Quarter .....	42-20-I
Rear .....	42-23-I
RUNCHANNEL .....	42-37-I
WINDSHIELD .....	42-15-I
WASHER .....	51-13-I
WIPER .....	51-13-I